
Assembly and instructions for terror kite / terror hawk kite


Faced downwards

Connect the wingrods through the loop using the metal joint

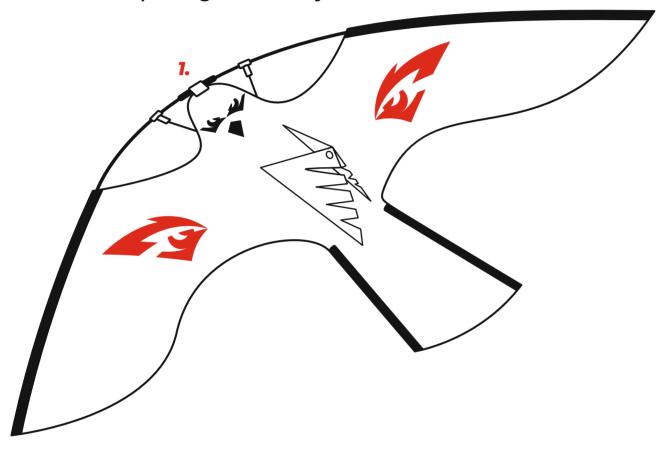


Tying the knot

The tailrods will be crossed for all the hawk models

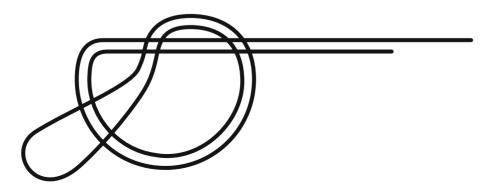


Top SideConnect the tailpens into the cavities

Top SideThe tailrods will be crossed

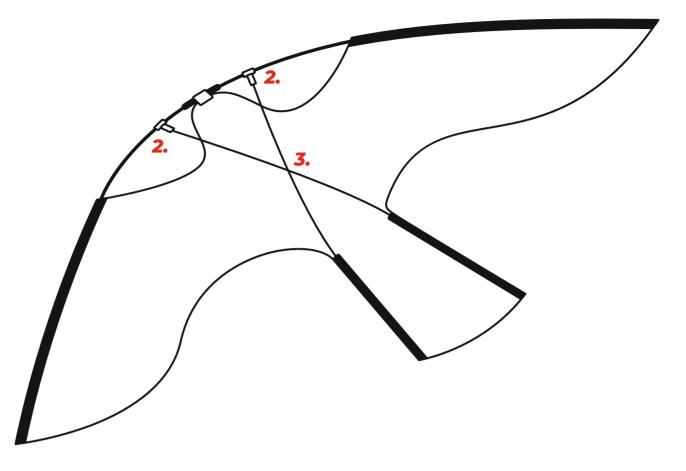


Assembly of the keyring

The tailrods will be crossed for all the hawk models

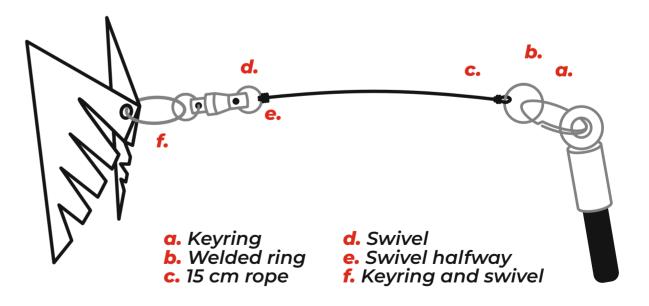






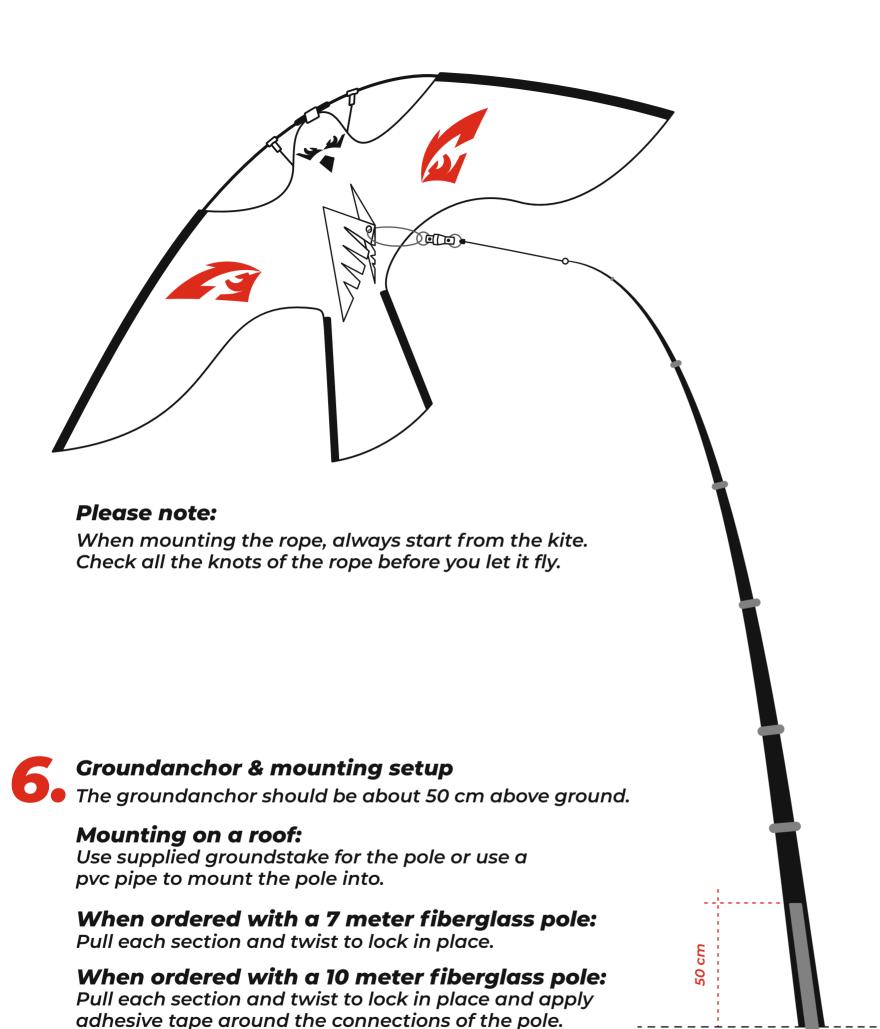

Mounting the kite

Angle the pole downwind to prevailing winds, and make sure that the kite hangs well clear to avoid it wrapping around the pole.

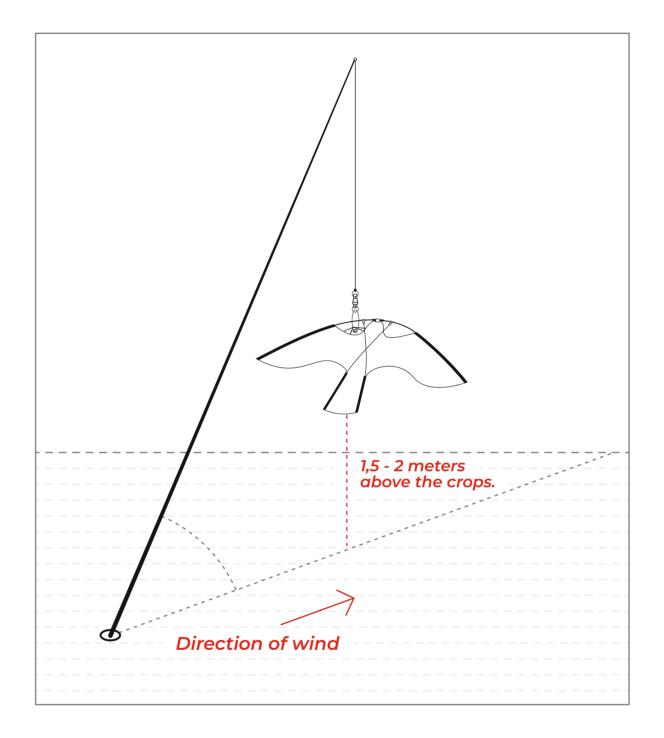

Please note:

In case of strong winds, the kite must be disassembled to prevent damage. The warranty expires at wind speeds above 4 Beaufort (30km/h).

