



## Garden Guard 380

**With motion sensor, strobelight,  
audio en ultrasonic sound and remote control.**

### Starting with the Garden Guard 380

The unit is supplied with an adapter 230 Volts. Open the back side of the unit and connect the adapter. You will see on below side an opening for cable. It is also possible to use battery type C (not supplied) instead of adapter, not both together! When you connect unit to power you see a red light behind sensor, this light stays on for 20 seconds. When this light goes out, unit is ready for use..

All settings you will find on the back side of the unit.

**Ready with settings, put backside correct on its place.**

**Sensitivity motionsensor:** Turn button "sensitivity dail", to the right is more sensitive.


**Audio volume:** With the button "sonic volume" you change the volume. When the sound disturbs your neighbour turn button to the left. The ultrasonic sounds keeps on working .

**Frequency:** use frequency button to change for different animals and birds.

**Switch motion sensor:** It is possible to let the unit work without using the motion sensor,  
switch on top: unit works with motion sensor,  
switch in the middle: unit works always,  
switch below: unit works in random intervals.

### Remote control:

The Remote Control is easy to use with 4 functions, for optimal use from the unit. He works 25 meters from the unit. Remote has 4 buttons: Ultrasonic, strobe light, stand-by and Turbo function.

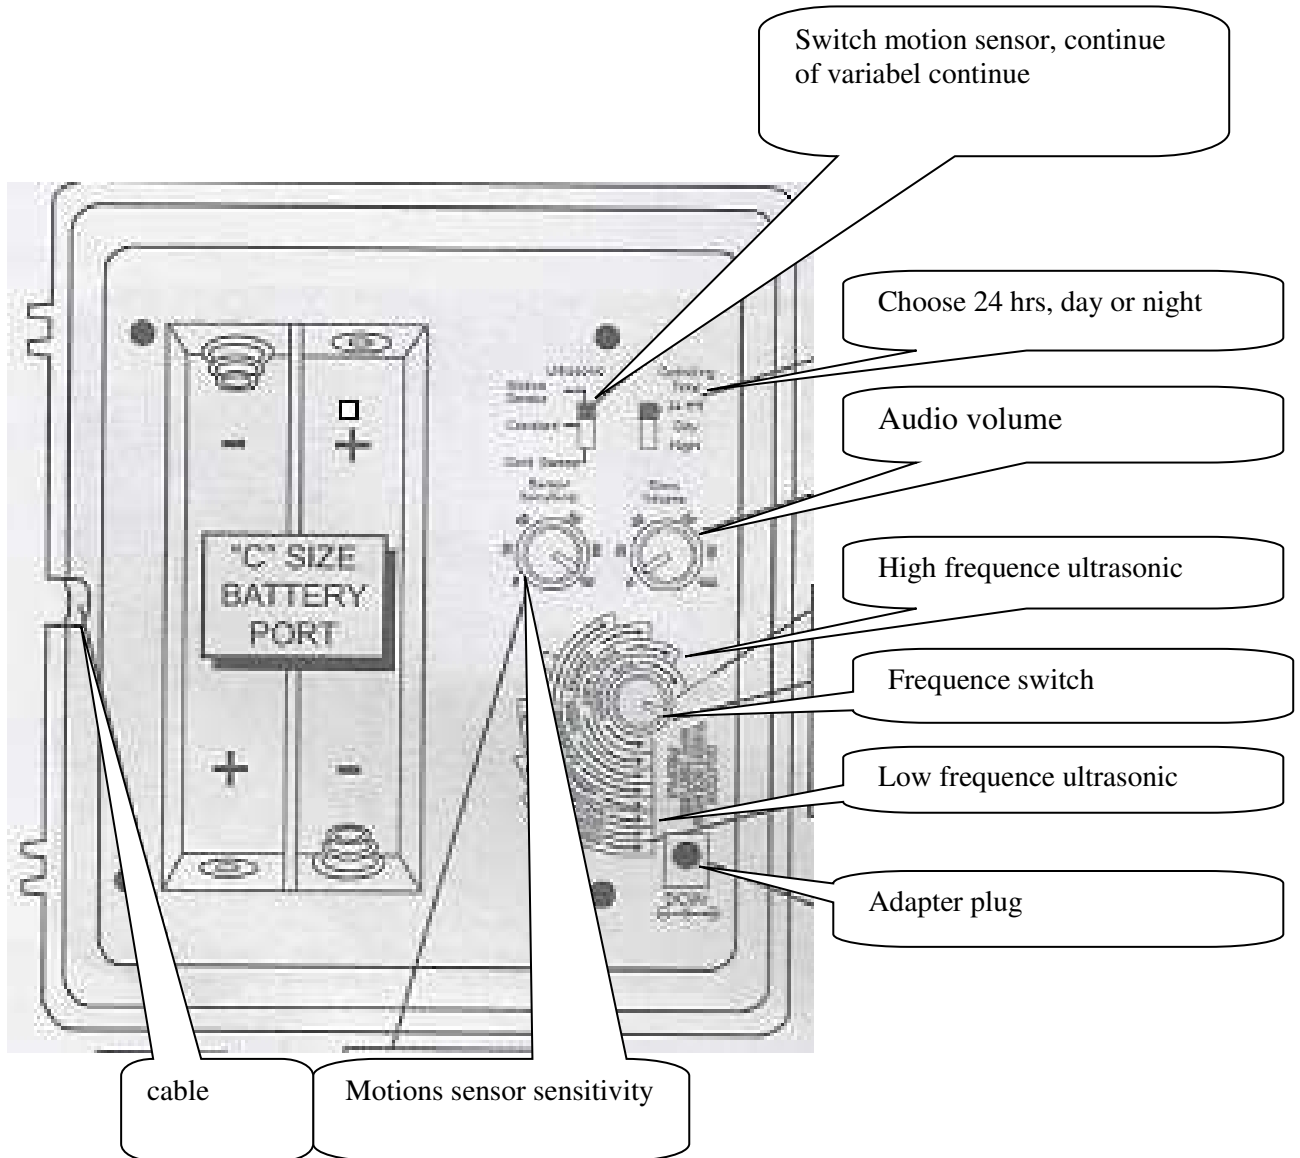

Insects - Deer - Raccoon - Armadillos - Birds/Skunks- Cats/Dogs - Rodents/Bats